

Instructions for PT207 &PT407

These instructions are the intellectual property of Polytunnelonline .com

(1) GH-032 (5 rods, 12 fixing pegs & cord)



(2) Connect the rods into their full length




(3) Lay out the plastic sheet with the sleeves on the underside. Then feed the rods through the material sleeves.



(4) Push the rods into the ground to approximately 2cm to 5cm to create the desired shape & secure in place.



(5) Pull the plastic down to ground level & fix down using the fixing pegs through the metal rings.

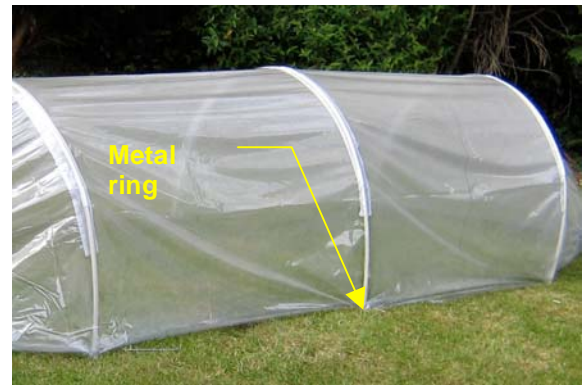

(6) Gather up the plastic & make taut, tie with the cord and fix to the ground with the metal pegs.



(7) Use the remaining pegs to fix down the plastic



(8) To ventilate the tunnel lift the plastic

