


Instructions for PT4520


These instructions are the intellectual property of Polytunnelonline .com

- (1) Item 1 x 4, item 2 x 8, item 3 x 8, item 4 x 4, item 5 x 15, item A x 4, item B x 2, item C x 4, item D x 2 and packet of pegs

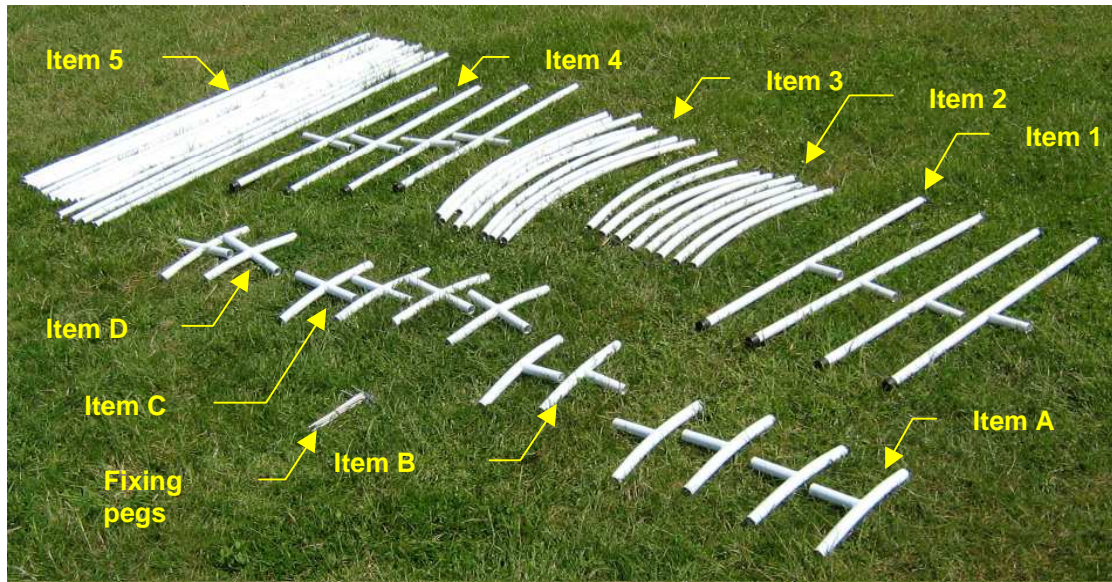

(2)

PT4520

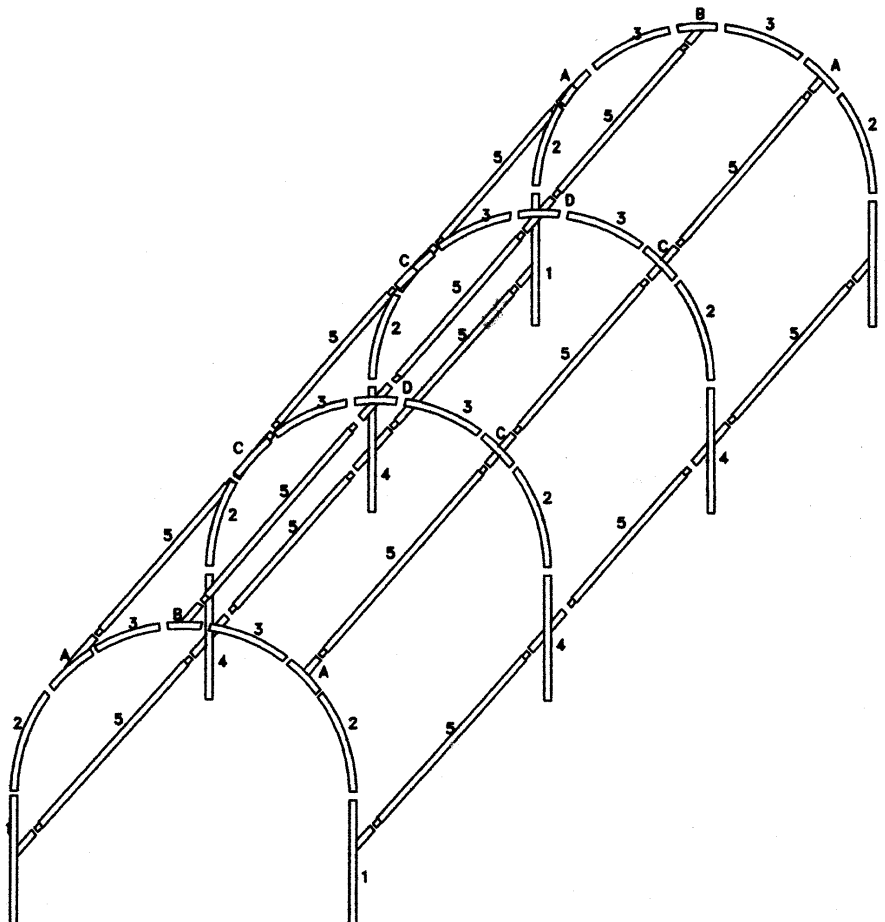


(3) Connect the rods together as shown in diagram 2




(4) Lay out the cover to the greenhouse along side the assembled frame




(5) We the aid of a friend carefully put the plastic tunnel over the metal frame

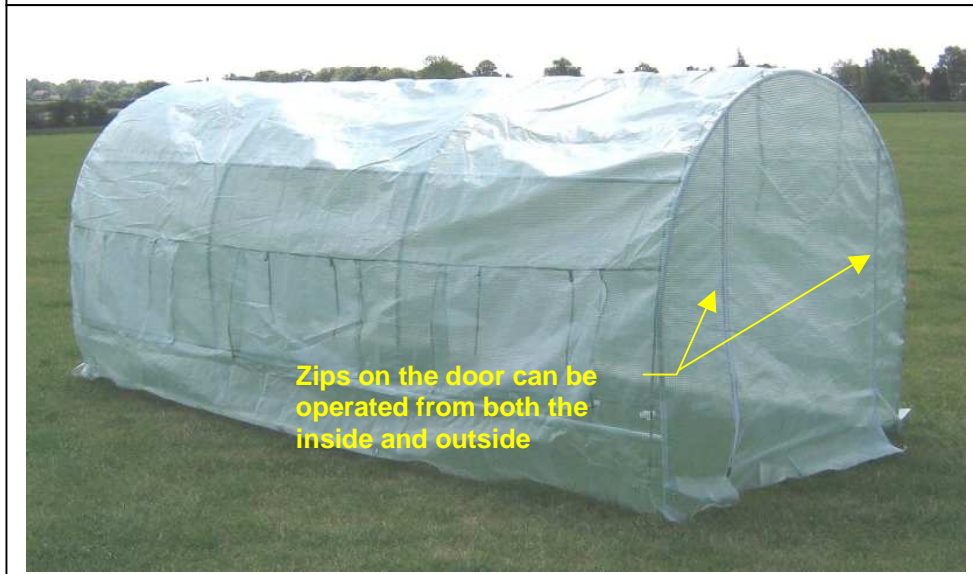

There are a number of internal ties that will allow you
(6) to fix the plastic out skin to the painted metal frame.

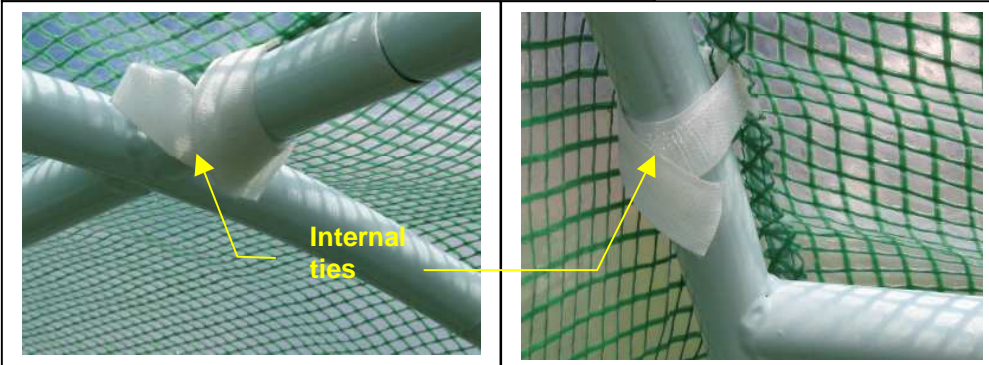

(7) Make the plastic outer skin taut and fix down.

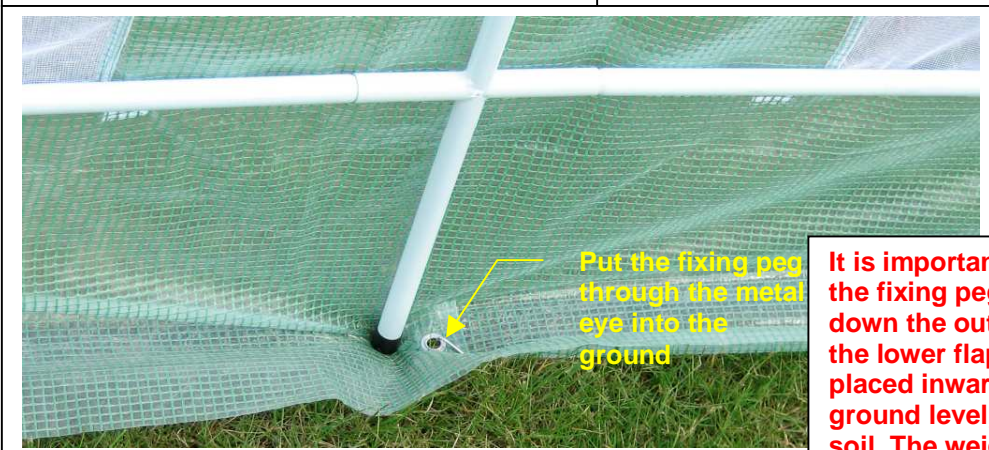

It is important that not only are the fixing pegs used to fasten down the outer cover, but that the lower flap of plastic whether placed inwards or outwards at ground level, is covered with soil. The weight of the soil will increase the stability of the poly tunnel. Please remember the poly tunnel can only be as secure as your fixing to the ground on which it has been built.

(8) There are 7 ventilators in this model plus the door

